 

 


mm inch	6,8 0.27	6,8 0.27	
mm ²	0,22...2,5	0,22...2,5	0,22...1,5
AWG	24...14	24...14	24...16

 
XB4 B..
ZB4 B..
ZB4 R..

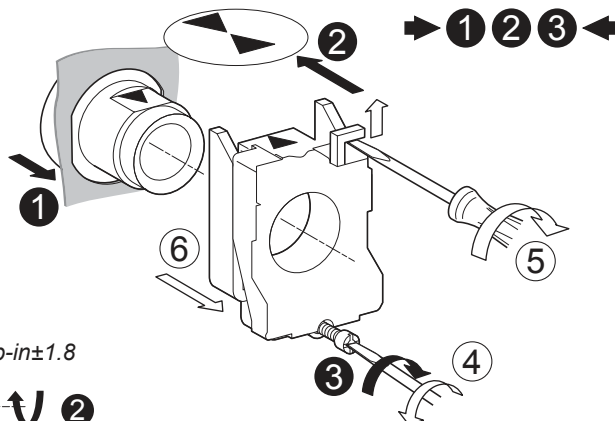


2,2 Nm±0,2 / 19.5 lb-in±1.8



0,8 Nm/7.5 lb-in (maxi 1,2 Nm/10.6 lb-in)



For use on flat surface of a type 4, 4x, 12 and 13 enclosure

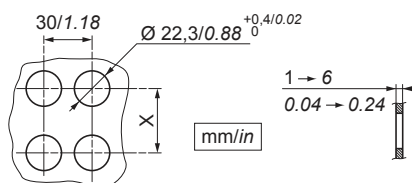

X = 40/1.57

X = 50/1.97




For EC Declaration of Conformity see: www.schneider-electric.com




! DANGER / DANGER / PELIGRO

OBSTRUCTED PUSH BUTTON MOTION MOVEMENT DU BOUTON POUSSOIR OBSTRUE OPERACION DEL PULSADOR OBSTRUIDA

Ensure Push Button will fully operate.
Assurez vous que bouton fonctionne
correctement.
Asegurarse que el pulsador funciona
correctamente.

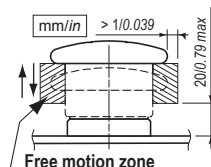

Failure to follow these instructions will result in death or serious injury.
Le non-respect de ces instructions entraînera la mort ou des blessures graves.
Si no se respetan estas instrucciones, se producirán graves daños corporales o la muerte.

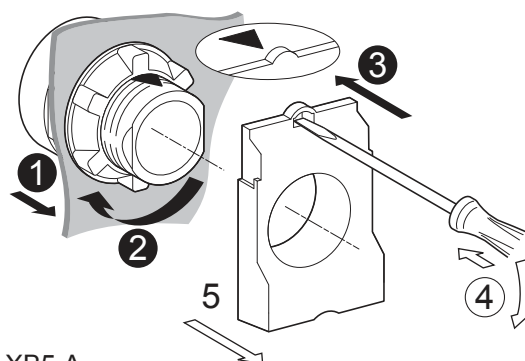

XB5 A..
ZB5 A..
ZB5 R..

