

FLEXTRACE®

FSTG00P05.07

TEMPERATURE MAINTENANCE SYSTEMS



www.flexelec.com

FST - FST/T - FST/I - FST/TP - FST/TF Self-regulating cables



Characteristics

- Can be cut to length on site.
- Will not self-destruct by overheating.
- Power supply: 230 V.
- Available as 10, 15, 25, 30 or 40 W/m at +10°C.
- **FST** : self-regulating cables, thermoplastic insulation.
- **FST/T** : with tinned copper braid for mechanical protection and earthing.
- **FST/I** : with stainless steel braid for mechanical protection and earthing.
- **FST/TP** : with tinned copper braid and outer thermoplastic anticorrosion sheath.
- **FST/TF** : with tinned copper braid and outer fluoropolymer sheath, ideal for the chemical industry where corrosive substances may be present.

Applications


Self-regulating cables of the FST range are used to protect against freezing or to maintain moderate temperatures.

Cables of type FST/T, FST/I, FST/TP and FST/TF comply with the technical evaluation document issued by the CSTB.


Cable FST/TP/30 is recommended for protecting against freezing in gutters.

Cables of type FST/T, FST/I, FST/TP and FST/TF can, with the appropriate accessories, be used in an explosive atmosphere.

To ensure that these heating elements enjoy a long service life, we recommend using a control device.

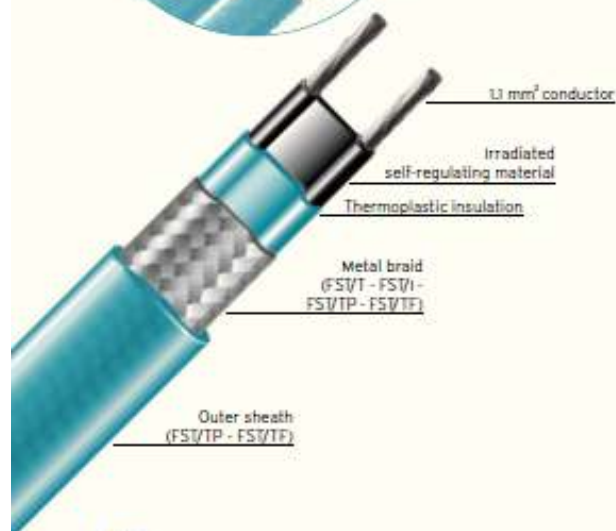

Power output according to pipe temperature

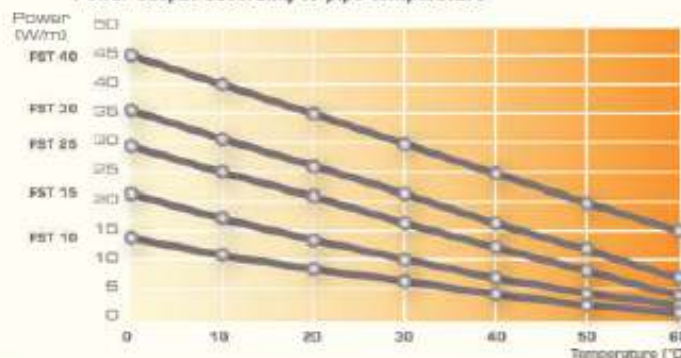

	FST 10	FST 15	FST 25	FST 30	FST 40
Insulation	Thermoplastic				
Dimensions					
FST	4 x 11 mm				
FST/T - FST/I	4.7 x 11.8 mm				
FST/TP - FST/TF	6 x 13 mm				
Power at 10°C	10 W/m	17 W/m	25 W/m	31 W/m	40 W/m
Permissible surface temperature	Unenergized circuit: max. + 85°C Energized circuit: max. + 65°C				
Start-up current					
+10°C	0.07 A/m	0.1 A/m	0.13 A/m	0.16 A/m	0.21 A/m
0°C	0.08 A/m	0.12 A/m	0.16 A/m	0.19 A/m	0.26 A/m
-20°C	0.12 A/m	0.15 A/m	0.21 A/m	0.24 A/m	0.32 A/m
Max. circuit length	198 m	154 m	124 m	110 m	88 m
Temperature class	T6 (B5°C)				

Use

Consult the pages of the catalogue devoted to the corresponding general operating principles, general instructions for use and accessories.

ATEX certificate: SiRA N° 03ATEX3312 II 2G

FLEXELEC S.A.S
12 rue des Yvines, Lumbres
Z.A. du Bois Rond
69720 ST BONNET DE MURE - FRANCE
Tel: +33 (0)472.48.30.90
Fax: +33 (0)478.40.82.81
E-mail: flexelec@overwin.com

FLEXELEC Dept
ONEIRASIA Pte Ltd
51 Goldhill Place #05-02/03
SINGAPORE 308950
Tel: +65.6255.4778
Fax: +65.6255.4779
E-mail: sales@overwin.com.sg

FLEXELEC (UK) Ltd
Unit 11 Kings Park Industrial Estate
Preston Park - KINGS LANGLEY
Hertfordshire - WD4 8ST - UK
Tel: +44 (0)1923.214477
Fax: +44 (0)1923.270064
E-mail: sales@overwin.co.uk

FLEXELEC Dept
ONEIRIN GmbH
Tennweg 23
D-65550 BISTEIN - GERMANY
Tel: +49 (0)626.94.31-0
Fax: +49 (0)626.83.99
E-mail: onieringmbh@overwin.com

TECHNICAL GUIDE

GENERAL INSTALLATION

AND INSTRUCTIONS FOR USE OF ALL FLEXELEC PRODUCTS



BASIC RULES

Your temperature maintenance system will give trouble-free operation provided it is fitted in accordance with good engineering practice. You should fit and connect up the cables and flexible heating elements as indicated below. Read the instructions carefully: it will be more costly to have to carry out repair work afterwards than to "waste" time reading these instructions to the end and installing your system in keeping with the recommendations given. (BS 6351 Part3)

It is prohibited to use the system in any way that does not respect the precautions for use.

Before beginning to fit the heating element, make sure that thermal insulation is fitted immediately afterwards: our products could be damaged by tools or solder, etc. falling on them if too much time elapses between these two operations.

Warning:

In no event should the heating element be held in the air or enclosed within insulating material while it is operating.
Do not energise the heating element before fitting it.
Do not immerse the heating element.
Do not fit the heating element if it is damaged.
Do not touch the heating element when it is energised.

Assembly and commissioning are subject to standards (BS 6351 Part3), safety instructions and accident prevention rules in force in each country. **It is prohibited to modify the devices in any way.**

Clean and wipe the outside of the part to be heated.

Also check that no sharp parts such as welds, welding flash, metal parts, etc. could damage the heating element.

The whole of the heating element must be in contact with the part to be heated.

In no circumstances should the heating element cross over or overlap itself.

Cover the whole of the heating element and the part to be heated with thermal insulation of recommended thickness.

Stick the warning label on the thermal insulation.

The heating element should be energised only when fitting operations are finished.

Connect up to a suitable, properly protected electric power supply.

The electrical protection systems (fuses, circuit-breakers, etc.) must be provided on the site as per the applicable standards in force.

SPECIAL INSTRUCTIONS

Ensure that the flexible heating element chosen is fully appropriate for the requirements of the installation. For this purpose, consult the FLEXELEC technical documents.

Check whether the project requires straight or spiral heat tracing and if extra lengths need to be provided for valves, flanges, pumps, etc.

Heat loss calculations for flanges, valves, piping supports or other elements may turn out to be complex because of difficulty in measuring the exact heat transfer surfaces. Many accessories such as flanges and valves are manufactured according to standards, while others, such as filters or pumps differ from one manufacturer or application to another. To determine heat losses, follow the recommendations below:

Type	Diameter	Equivalent cable length
Flanges	≤ DN 200	0.3 m
	> DN 200	1.0 m
Valves	≤ DN 200	1.0 m
	> DN 200	3.0 m

Note: The extra length of cable calculated in these 4 cases may not be used in full for practical reasons. All constant power cables or self-regulating heating tapes have maximum circuit lengths depending on their power rating and voltage. Consult the FLEXELEC technical documentation.

When fitting heating elements, do not:

- allow them to come into contact with sharp edges,
- apply excessive pulling force to them,
- allow them to be crushed in any way.

The cables must be terminated as soon as possible after fitting to prevent damp entering by non-sealed ends.


- inspect the heating elements and accessories as soon as you receive them to check that they have not been damaged during transit. It is recommended to carry out measurement of insulation resistance at this stage.
- For constant power cables, check that sufficient length has been provided to allow for the incorporated cold tails.
- Allow an extra 0.5 m of self-regulating heating cable to connect to another cable or for a branch joint.
- Always begin heat tracing at the power supply end.

FITTING THERMOSTATS AND JUNCTION BOXES

To protect against freezing, air thermostats are generally used. These must be fitted in the area most exposed to freezing and can be fixed to the piping or any other support. If they are fitted to piping, the heating cable can be connected directly into the thermostat. Self-regulating heating cables can be connected directly to a junction box (a thermostat is not strictly necessary, but strongly recommended). Supports exist for fixing the junction box or thermostat onto the piping.

Bulb and capillary or temperature probe thermostats are normally used for production lines to control the surface temperature and must be fitted immediately adjacent to the power point. Supports exist for fixing the thermostat onto the piping.

First fix the thermostats and junction boxes in the planned locations. For bulb thermostats, the bulb must always be fixed as shown below:

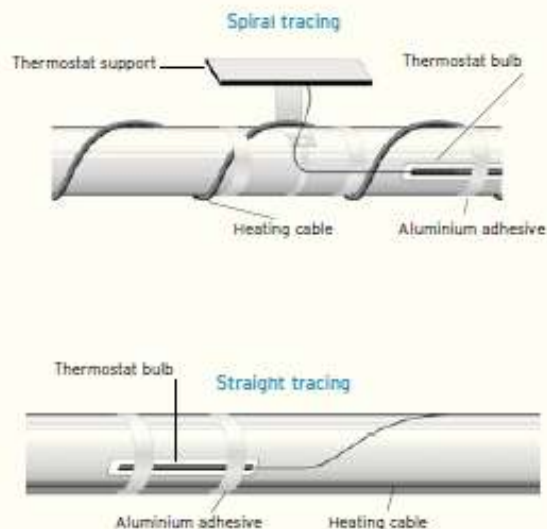

INSTRUCTIONS

FITTING HEATING CABLES

(the term "cables" also refers to other flexible heating elements).
The first rule is never to cross heating cables or lay one on top of another.



It is not essential to completely cover the heating element with aluminium adhesive, but this is recommended for the following reasons:

- The heating cable will not be trapped in the thermal insulation.
- Thermal efficiency will be improved through better contact between the heating cable and the piping.
- This eliminates the risk of hot spots on the heating cable.
- This type of fitting is strongly recommended on flanges, valves, taps, etc.

Straight tracing



Spiral tracing

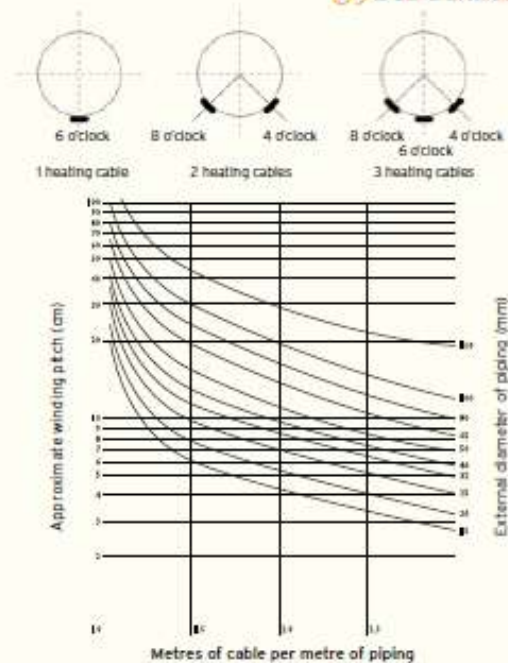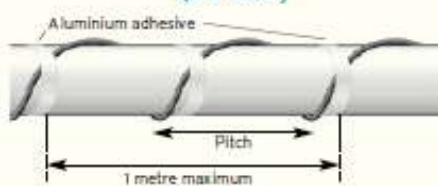

TRACING PIPING EQUIPMENT: ELBOWS, FLANGES, VALVES AND PIPING SUPPORTS

- Notes:**
- Inverting the screw pitch either side of the equipment makes it easier to remove.
 - Ensure that the heating cable is properly in contact with the equipment.
 - Smooth over any sharp edges as necessary (with an aluminium tape, for example).

Type	Straight tracing	Spiral tracing
Elbows	Trace on the outside of the elbow	Regular pitch, adjacent turns must not touch on the inside
Flanges		
Small diameter valves		
Large diameter valves		

TECHNICAL GUIDE

GENERAL INSTALLATION

AND INSTRUCTIONS FOR USE OF ALL FLEXELEC PRODUCTS



PIPING SUPPORTS

Type	Straight tracing	Spiral tracing
Screwed collars		
Welded flat iron bars		
Welded columns		

TRACING A BRANCH JOINT

Branch joints or nozzles are often of a smaller diameter than the main pipe. Return tracing must therefore be avoided on long nozzles as these would increase the installed power to the point of multiplying it by two (straight tracing) and causing local overheating.

Short nozzles: 1.5 m maximum.

Long nozzles: greater than 1.5 m.

For long nozzles, break the circuit and fit a junction box to allow the heating circuit to branch off.




FITTING A HEATING CABLE TO PIPING WITH A STEAM TRACER

Check that the cable sheath will withstand the temperature of the steam.

Never use spiral tracing, which would cause the cable to come into contact with the steam tracer.


Use single or double straight tracing.

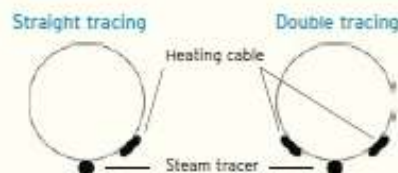

TRACING TWO PIPES SIDE BY SIDE

Never spiral the heating cable over the piping.

Use double straight tracing.

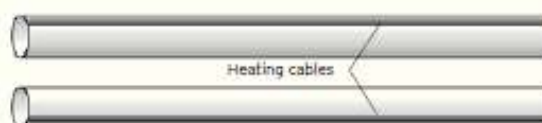

INSTRUCTIONS



INSPECTION

Before fitting the thermal insulation, perform the following inspections:

- Throughout the cable installation process.
- As soon as possible once the installation is finished and before connecting up to the electric power supply.

Installation inspection

The following inspections must be made:

- The heating cables and temperature probes (if any) are in close contact with the piping; there is no air gap between these devices and the piping.
- No cable loops are hanging in mid air.
- No heating cable is trapped under piping supports, thermostat supports or junction boxes, etc.
- No heating cable is crossed over or laid on top of another, or twisted about itself.
- All the heating cables are fixed to the piping with appropriate fixing materials.

Circuit continuity and insulation resistance inspection

The following procedure is designed to check that the various heating cables are operating properly.

• Constant power cables

- 1 Check the resistance and continuity of the circuits using a multimeter.
 - 2 Check the insulation resistance between the conductors and the earth using a 2500 V DC (500V DC min) megohmmeter.
- Whatever the length of the cable, the minimum insulation resistance must be 10 megohms.
- 3 The results of the above tests must be recorded and stored.

• Self-regulating heating cables

Check the insulation resistance using a 2500 V DC (500V DC min) megohmmeter.

Whatever the length of the cable, the minimum insulation resistance must be 10 megohms.

- 1 Between conductors and piping if the cable is not braided.
- 2 Between conductors and braid if any.
- 3 For cables with braid and sheath, **perform 2 tests:**
 - **Test 1:** between conductor and braid,
 - **Test 2:** between braid and metal piping
- 4 As before, record and store the test results.

MAINTENANCE

Visual inspection

Visually inspect the piping with tracers to check that neither the insulation nor the cable have been damaged.

Tracer inspection

The following inspection procedures must be carried out at least once a year (before winter) for installations protecting against freezing or twice a year for production installations.

Thermal insulation

- The heating cables must always be protected by thermal insulation.
- During inspection operations, be very careful not to damage the heating cables.
- The thermal insulation must always have the same temperature limit as the heating cables.
- The heating cables must never be trapped within the thermal insulation.
- The thermal insulation must be appropriate for the environmental conditions prevailing.
- Apply labels warning that electrical heat tracing is in use on the outside of the thermal insulation at intervals which make it possible for them to be seen clearly, wherever the person working on the piping may be. Do not forget to place them on both sides of the thermal insulation.

Before any inspection work, switch off the electric power supply.

- Remove the lid from junction boxes and thermostats.
- Disconnect the heating cable from the electric power supply.
- Check, as described above, the insulation resistance rating and, for constant power cables, the resistance rating. Make a note of these figures and store them.
- Compare these figures with those from the previous inspection. If they are the same, reconnect the heating cable and replace the junction box lids.
- With the thermostat still electrically insulated, carry out the inspection as above. Check that the power cables are properly connected to the right terminal block. Using a multimeter, check that the thermostat cuts off power to the heating cables by lowering and raising the temperature setpoint to minimum and then to maximum.
- If the thermostat operates, do not forget to put the setpoint back to the initial temperature.
- Replace the thermostat lid.
- Visually inspect the installation in order to detect any damage to piping or insulation.
- Connect the electric power supply back up.

PIPING

QUESTIONNAIRES

THESE QUESTIONNAIRES ARE INTENDED TO HELP YOU
TO CHOOSE THE RIGHT PRODUCT



A

Temperature maintenance

Temperature maintenance is the operation which aims to keep the temperature of a device constant.

This implies that the products and their containments must already be at this same temperature.

If this is not the case, then the application comprises a heating dimension, and part B of the questionnaire must also be completed.

Temperature to be maintained		°C
Min. ambient temperature		°C
Nominal Diameter	mm	OR outside diameter of the piping
Length of piping		m
Piping material <i>The material that the piping is made of is important information since it will influence the choice of power rating of the cable or braid.</i>		
Max. surface temperature of the piping <i>The max. temperature of the piping is sometimes a decisive criterion, for example if there are high temperature steam cleaning cycles.</i>		°C
Type of substance being conveyed <i>This is important, as it must be ensured that, in the event of leakage the insulation of the heating cable will not be chemically attacked.</i>		
Thickness of the insulation		mm
Type of insulation		
Thermal conductivity of the insulation		W/m.K
Max. temperature acceptable for the insulation		°C
Available voltage		V
Safe area		OR ATEX hazardous area (indicate the temperature class)
Network geometry: nozzles, "T", any diagram		
Other <i>flanges, pumps, valves, max. or min. temperature acceptable by the fluid, etc.</i>		

PHOTOCOPY - FILL IN - FAX with your name, address, phone n°, email

B

Heating

Heating may be static or involve a flow.

Fluid density		kg/dm³
Specific heat of the fluid		kJ/kg.K
Initial temperature		°C
Temperature to be reached		°C
Min. ambient temperature		°C
Time allowed for heating		h
Fluid flow rate		kg/h
Inside diameter	mm	OR Piping thickness
Specific heat of the piping material		kJ/kg.K

FLEXLEC S.A.S.

10, rue des Frères Lumière
Z.A. du Bois Rond
69120 ST BONNET DE MURE - FRANCE
Tel : +33 (0)4 72 48 30 90
Fax : +33 (0)4 78 40 02 81
E-mail: flexelec@omerin.com

FLEXLEC Dept

OMERIN ASIA Pte Ltd
51 Goldhill Place #06-02/01
SINGAPORE 308900
Tel : +65 6255 4778
Fax : +65 6255 4779
E-mail: sales@omerin.com.sg

FLEXLEC (UK) Ltd

Unit 11 Kings Park Industrial Estate
Princes Risborough - KINGS LANGLEY
Hertfordshire - WD4 8ST - UK
Tel : +44 (0) 1923 274477
Fax : +44 (0) 1923 270064
E-mail: sales@omerin.co.uk

FLEXLEC Dept

OMERIN GmbH
Terweg 2 B
D-65550 IGGSTEIN - GERMANY
Tel : +49 (0) 6126 94 31-0
Fax : +49 (0) 6126 83 99
E-mail: omerin@omerin.com

VESSEL - HOPPER

QUESTIONNAIRES

THESE QUESTIONNAIRES ARE INTENDED TO HELP YOU TO CHOOSE THE RIGHT PRODUCT



A Temperature maintenance

Temperature maintenance is the operation which aims to keep the temperature of a device constant. This implies that the products and their containments must already be at this same temperature. If this is not the case, then the application comprises a heating dimension, and part B of the questionnaire must also be completed.

Temperature to be maintained		°C
Min. ambient temperature		°C
Outside diameter of the vessel or dimension of the edges if rectangular:		mm
Height or length of the vessel		mm
Cylindrical height available for tracing		mm
Bottom: flat, rounded, etc.		
Feet: number, insulation, etc.		
Vessel material <i>The material that the vessel is made of is important information since it will influence the choice of power rating of the cable or braid.</i>		
Max. surface temperature of the vessel <i>The max. temperature of the vessel can be a decisive criterion, for example if there are steam cleaning cycles</i>		°C
Type of substance contained <i>This is important, as it must be ensured that, in the event of leakage the insulation of the heating cable will not be chemically attacked</i>		
Thickness of the insulating lagging		mm
Type of insulating lagging		
Thermal conductivity of the insulation		W/m.K
Max. temperature acceptable for the insulation		°C
Available voltage		V
Safe area ☐ OR ATEX hazardous area ☐ <i>(Indicate the temperature class)</i>		
Obstacle on the surface of the vessel: nozzles, feet, ... any diagrams		
Other <i>flanges, pumps, valves, max or min temperature acceptable by the fluid, etc.</i>		

PHOTOCOPIY - FILL IN - FAX with your name, address, phone n°, email

B Heating

Heating may be static or involve a flow.

Fluid density		kg/dm³
Specific heat of the fluid		kJ/kg.K
Initial temperature		°C
Temperature to be reached		°C
Min. ambient temperature		°C
Time allowed for heating		h
Fluid flow rate		kg/h
Max. vessel capacity		kg or m³
Max. fill rate		%
Vessel thickness		mm
Specific heat of the vessel material		kJ/kg.K

FLEXELEC S.A.S.
10, rue des Frères Lumière
Z.A. du Bois Rond
69700 ST BONNET DE MURE - FRANCE
Tel : + 33 (0)4.72.48.30.90
Fax : + 33 (0)4.76.40.82.81
E-mail: sales@flexelec.com

FLEXELEC Dept
OMERIN ASIA Pte Ltd
51 Goshill Place #05-01/01
SINGAPORE 308900
Tel : + 65 6255.4778
Fax : + 65 6255.4779
E-mail: sales@omerin.com.sg

FLEXELEC (UK) Ltd
Unit 7 Kings Park Industrial Estate
Princes Hill - KINGS LANGLEY
Hertfordshire - WD4 8ST - UK
Tel : + 44 (0) 1923.274477
Fax : + 44 (0) 1923.270264
E-mail: sales@omerin.co.uk

FLEXELEC Dept
OMERIN GmbH
Tennweg 2 B
D-65510 IOSTEIN - GERMANY
Tel : + 49 (0) 6206.94.20-0
Fax : + 49 (0) 6206.83.99
E-mail: omerin@omerin.com

PRODUCT

QUESTIONNAIRES

IN ORDER TO DETERMINE A SPECIAL PRODUCT MADE TO THE MEASUREMENTS YOU REQUIRE, ANSWERS TO THE FOLLOWING QUESTIONS ARE NECESSARY. THESE WILL BE USED TO DEFINE THE BEST PRODUCT FOR YOUR NEEDS.



A Cords

Linear ohmic value		ohm/m
Type of insulation <i>PVC/Silicon elastomer/Fluoropolymer</i>		
Outside diameter		mm
OR		
Final circuit length		m
Power		W
Voltage		V
Type of insulation <i>PVC/Silicon elastomer/Fluoropolymer</i>		

B Cables - Tapes

Total length		mm
Heating length		mm
Power		W
Voltage		V
Type of insulation		
Braid		
Braid material <i>tinned copper, stainless steel, glass etc.</i>		
Outside diameter		mm
Number of power cables		1 or 2
Length of power cables		mm
Type of insulation for the connection between heating and cold part(s) <i>(sleeving, moulding, etc.)</i>		
Other		

C Mats

Length		mm
Width		mm
Other geometry details <i>diagram and dimensions</i>		
Power		W
Voltage		V
Power cable length		mm
Location of power cable <i>diagram and dimensions</i>		

OPTIONS

Adhesive surface for permanent fitting <i>(YES / NO)</i>	
Type of removable fitting <i>Hook + spring / Micro / Epoxide + silicon tape</i>	
Location for thermostat probe <i>(YES: state diameter / NO)</i>	
Temperature limiter <i>(60°C / 80°C / 150°C / NO)</i>	
PT 100, J Thermocouple <i>(YES / NO)</i>	
Location of options <i>diagram and dimensions</i>	

D Hoses

There are so many different types of pipe that these questions are only a basis to help us define the product. Please contact us to provide us with more complete information.

Nominal inside diameter <i>standard: maximum = 25 mm</i>		mm
Total hose length		m
Operating temperature		°C
Max. operating temperature		°C
Voltage		V
Power		W
Type of probe <i>(P = PT 100, N = NiCr-Ni or F = Fe/Cu/Ni)</i>		
Max. pressure		bar
Type of connections		
Other		

PHOTOCOPY - FILL IN - FAX with your name, address, phone n°, email

FLEXELEC S.A.S

10, rue des Frères Lumière
2 A, rue Bois Rond
67000 ST ISHAENT DE MUSE - FRANCE
Tel: + 33 (0)4.72.46.30.90
Fax: + 33 (0)4.76.40.60.01
E-mail: flexelec@amerin.com

FLEXELEC Dept

OMERN ASIA Pte Ltd
31 Goldhill Place #06-01/01
SINGAPORE 309000
Tel: + 65 6255 4775
Fax: + 65 6255 4779
E-mail: sales@omern.com.sg

FLEXELEC (UK) Ltd

Unit 11 Kings Park Industrial Estate
Preston Hill - KINGS LANGLEY
Hertfordshire - WD4 6ST - UK
Tel: + 44 (0) 1923 274477
Fax: + 44 (0) 1923 270064
E-mail: sales@omern.co.uk

FLEXELEC Dept

OMERN GmbH
Terrenweg 2 B
D-65550 LÖSTEN - GERMANY
Tel: + 49 (0) 6265 9431-0
Fax: + 49 (0) 6265 83399
E-mail: omern@omern.com