



Trouble Shooting

Problems	Explanation	Possible Solution
1. Your Door Chime has stopped sounding.	1.a. Your Door Chime Receiver batteries may be flat (AA size batteries).	1.a. Replace the batteries in your Door Chime Receiver (AA size batteries).
	1.b. If the red indicator light on the Bell Press Transmitter is no longer illuminated then your transmitter battery is flat.	1.b. Replace your Bell Press Transmitter battery (A23 12V).
	1.c. Units are out of range (max range 50 metres)	1.c. Operate the chime unit with the right range
	1.d. Wrong polarity of battery in Push button.	1.d. Re-insert battery with polarity to match markings.
2. If you have checked your batteries and your Door Chime is still not operating.	2.a. Check the distance between your Door Chime and Bell Press, they may be located too far away from each other.	2.a. Relocate the Door Chime Receiver closer to the Bell Press.
	2.b. Your Bell Press may be located too close to a metal structure or too close to the ground.	2.b. Relocate your Bell Press away from the metal structure or further away from the ground.
3. Selected chime has changed	3.a. Battery in a Bell Press unit was replaced	3.a. Refer to "tone selection"

Warranty

HPM Wireless Door Chimes are warranted as here and after appears, against faulty material and/or workmanship for a period of one year from date of purchase. The obligation of the manufacturer, under this warranty, is limited to replacing any defective parts with the same or similar products when the unit is returned to the authorised place of purchase.

To obtain warranty replacement, the purchase receipt should be returned with the product.

This warranty becomes void on any unit which has been tampered with or damaged by accident, short circuited, loaded beyond rating or damaged otherwise by improper operation. This guarantee is in addition to any guarantees implied by State or Federal Legislation.

Warranty is not extended to batteries included within this pack

HPM Industries Pty Ltd
www.hpm.com.au
www.hpm.co.nz
1300 369 777



Door Chime

The Wireless Door Chime consists of two separate units:

1. Bell Press Unit (Transmitter) 2. Door Chime (Receiver)

These units are completely self-contained and no wiring between them is necessary.

Range

Up to 50 metres (164 feet).

NOTE: Range depends on location, temperature and battery condition.

Bell Press Transmitter

The Bell Press Transmitter has one 12V battery (type A23) included which should last about 850 days (in excess of 2 years) under normal operating conditions.

Door Chime Receiver

The Door Chime Receiver is powered by 2 x "AA" (CAT D642/01) or 3 x "AA" (CAT D642/05) batteries (not included). Alkaline batteries are recommended for longer operating life.

IMPORTANT: Do not use rechargeable batteries, do not mix old and new batteries or different types.

Installation

Door Chime Receiver

Step 1 - Depress tab on Door Chime Receiver to remove back cover plate.

Step 2 - Insert 2 x "AA" (CAT D642/01) or 3 x "AA" (CAT D642/05) size alkaline batteries ensuring that the coil springs contact the negative (-) end of each battery.

The Door Chime Receiver is fully portable and free-standing and can be placed anywhere in the house (eg, table, bookshelf, cupboard, mantelpiece, window sill, etc). It can also be fixed to a wall temporarily or permanently as required.


Before permanently fixing press and door chime receiver in placed, test location of both units to ensure satisfactory operation.

The Door Chime Receiver has one slotted hang hole on the back. This hole will enable the Door Chime Receiver to be hooked onto a screw and easily removed or relocated to another room.

Bell Press Receiver

Step 1 - Remove plate cover.

Step 2 - Insert 12V battery (included in pack). See diagram below.

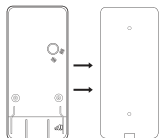

Step 3 - Replace plate cover.

Step 4 - Press the Push Button to ensure that the red LED indicator lamp lights, indicating that the battery is correctly installed.

Step 5 - Fix the unit either directly to your front door or a position close. The bell press is suitable for outdoor use, however for best performance and a longer life the bell press should not be exposed to direct sunlight or rain. The device can also be used as a remote control and doesn't require any installation.

IMPORTANT: Do not mount the Bell Press Transmitter on metal or near a metal door frame, security door, or in close proximity to any metal outdoor furniture. The range of the unit may be substantially reduced.

Door Chime Operation

Press the button on the Bell Press Transmitter. The Door Chime will sound. Press Chime Button again to


repeat chime. Continuous pressing of the button will repeat the chime.

Important Notes

1. The operation and range of your Long Range Wireless Door Chime depends on location, temperature and battery condition.
2. Try different locations in your home, ideally 1 metre from floor. Move Door Chime Receiver closer to Bell Press Transmitter to improve operation.
3. Do not expose the chime unit to rain or immerse either unit in water.
4. Avoid locations where the Bell Press Transmitter is exposed to direct summer sunlight.
5. Do not leave exhausted batteries in Door Chime Receiver or Bell Press Transmitter.
6. Clean only with a damp cloth and mild detergent. Do not use solvents.

Tone selection

The tone selector is located in the Bell Press Transmitter. To change tone simply remove the name plate on the Bell Press and press the black selector to choose the desired chime.

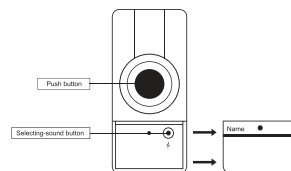

Chimes include:

- Dingdong
- Für Elise
- Dingdong (Clanging chime)
- Bird Chirping
- Dingdingdong (church bell)
- Cuckoo singing
- Westminster temple ding
- Jingle bells
- Dingdong dingdong
- Happy New year
- Dingdong dingdong (clanging bells)
- Merry christmas
- Ding ding dong (chiming bells)
- Westminster (church bells)
- Frosty the snowman
- Westminster (clanging bells)

Maintenance

The following suggestions will help you care for the Door Chime so you can enjoy it for years.

1. Keep the Door Chime dry. If the Door Chime gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.

2. Use and store the Door Chime only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.

3. Handle the Door Chime gently and carefully. Dropping it can damage the circuit boards and can cause the Door Chime to work improperly.

4. Keep the Door Chime away from dust or dirt, which can cause premature wear of parts.

5. Wipe the Door Chime with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the chime.

6. Use only fresh batteries of the recommended size and type. Always remove old or weak batteries. They can leak chemicals that can destroy electronic circuits.

7. Modifying or tampering with the Door Chime's internal components can cause a malfunction and might invalidate its warranty.