


MODEL:SPNRFR


WITH REMOTE CONTROL

Model:SPNRFR

1. Use Eco/Med/High buttons to alter fan speed.
2. "OFF" button will turn the fan off only
3. Turn Light "ON/OFF" for light.
4. Press the "STEP DIM" button to transition through 75%, 50%, 25% then back to 100% of light output.

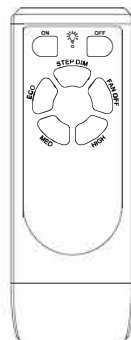

WIRING DIAGRAM FOR ISOLATION SWITCH WITH REMOTE CONTROL

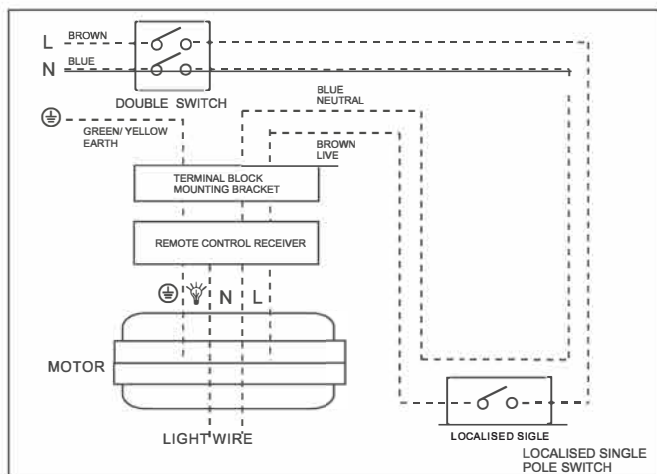

All pole disconnection switch must be included in the fixed wiring.


- Step 1. Connect EARTH wire to the terminal port marked "⊕" on the terminal block mounting bracket.
- Step 2. Connect the supply LIVE wire to the wall controller terminal port labeled "TO 240V/50Hz".
- Step 3. Connect a wire from the Fan Live "L" from the terminal block mounting bracket, to the terminal port labeled "FOR FAN-L" on the wall controller.
- Step 4. Connect a wire from the Light Live "⚡" from the terminal mounting bracket, to the terminal port labeled "FOR LIGHT-L" on the wall controller. **Note: The fan light wiring is only applicable to fan models with a light kit.**

Step 5. Connect the supply Neutral wire to the terminal port marked "N" on the terminal block mounting bracket.

Once all the above steps have been followed, you are now ready to restore the mains power supply. Make sure there is nobody near or under the fan, then turn on (and light switch if included in your model) to test.

ATTACHING REMOTE RECEIVER

SPNRFR Available as optional Extra

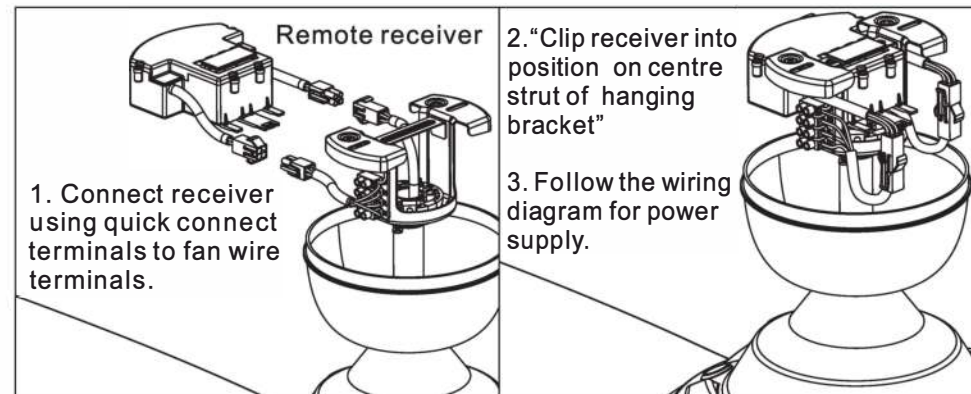

WARNING: FOR YOUR SAFETY, ENSURE THE MAINS SUPPLY IS SWITCHED OFF TO THE WIRING CIRCUIT BEFORE PERFORMING ANY ELECTRICAL TASKS.