
ventair tm

THE AIR MOVEMENT SPECIALISTS

INSTRUCTION MANUAL

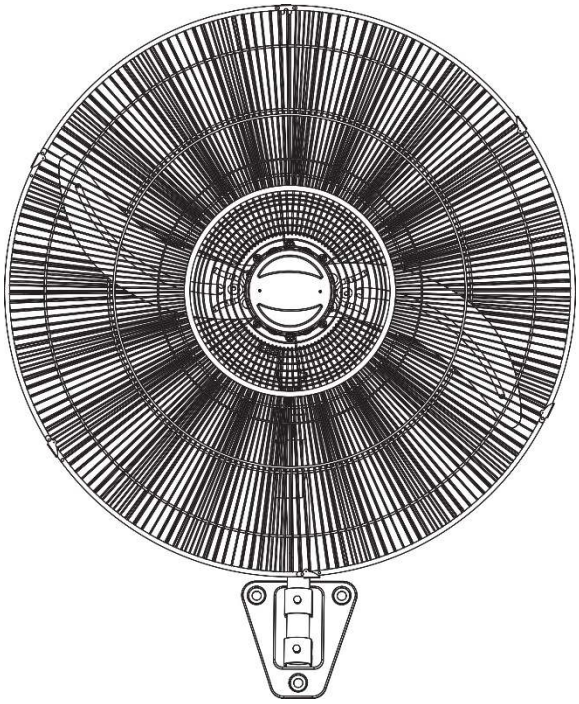

(This photo is for reference only; it does not mean you are purchasing an identical product.
Fan picture is for illustration purposes only. Styles may vary according to the model.)

Installation Manual, Rev 1.0

Models:

Wall 75: **WAL75**
Pedestal 75: **PED75**

CAUTION
Read Instructions Carefully
For Safe Installation and
Fan Operation

CONTENTS

- OVERVIEW
- ASSEMBLING
- OPERATION
- CARE AND MAINTANCE
- TECHNICAL
- STORAGE AND DISPOSAL
- WARRANTY

THANK YOU FOR PURCHASING

Thank you for purchasing this quality Ventair cooling fan. To ensure correct function and safety, please read all instructions before using the product and keep all instructions for future reference.



WARNING


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons. This will also void your warranty.
2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for household and indoor use ONLY. Do not use it outdoors or anywhere it might be exposed to the elements.
4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place fan on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the fan.
5. Do not use this product in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
6. **To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.**
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
9. When the appliance is not in use and before cleaning, unplug the appliance from the outlet. Fully assemble the fan before switching on again.
10. To disconnect the fan, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.
11. Do not operate the fan in the presence of explosive and/or flammable fumes.
12. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
13. Do not operate fan with a damaged cord or plug, or if the product malfunctions, or is dropped or damaged in any manner.
14. Avoid contact with moving fan parts. Do not insert any body parts (e.g. finger) or objects through the grill when the fan is operating.
15. The use of attachments not recommended by the manufacturer may be hazardous.
16. Place the fan on a dry, level surface to avoid overturning.
17. Do not operate if the fan housing is damaged.
18. Do not cover the grill, or operate in close proximity to curtains, etc. Ensure adequate ventilation around the unit.
19. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified technician to replace loose or worn outlet.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

21. If the fan is not working properly, contact a qualified technician for examination and repair. Never attempt to dismantle the fan yourself.
22. Never install or store the unit where it could be subject to:
    a. Heat sources such as radiators, heat registers, stoves or other products that produce heat
    b. Direct sunlight
    c. Mechanical vibration or shock
    d. Excessive dust
    e. Uneven surfaces
23. Do not leave the fan running unattended.
24. The fan must be fully and properly assembled before use.
25. The appliance is only intended for the purpose described in user manual.
26. Do not use appliance or any part of the appliance out of the intended use to avoid risk.
27. The use of attachments which are not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.


OVERVIEW

Wall Fan

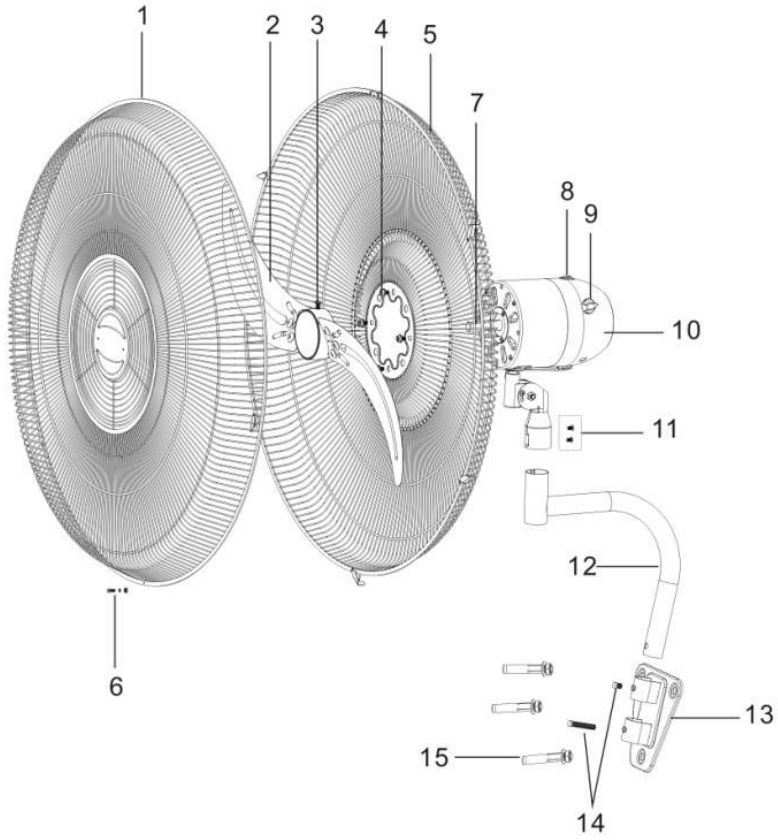

1. Front Grill
2. Fan Blade
3. Blade Screw
4. 4 x Rear Grill Locking Screw
5. Rear Grill
6. Small Grill Screw & Nut
7. Motor Shaft
8. Oscillation Switch
9. Speed Dial
10. Motor Housing
11. 2 x Neck Screw
12. Pole
13. Base
14. Base Locking Screw
15. 3 x Expansion Bolt

Pedestal Fan

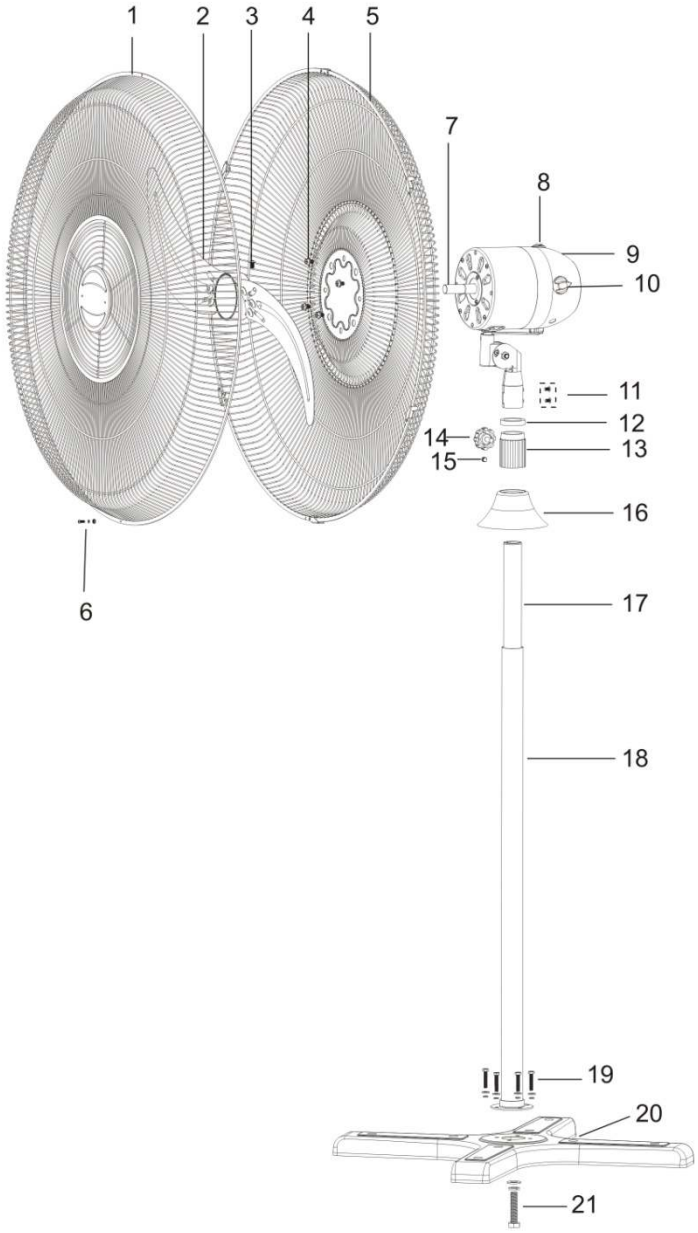

1. Front Grill
2. Fan Blade
3. Blade Screw
4. 4 x Rear Grill Locking Screw
5. Rear Grill
6. Small Grill Screw & Nut
7. Motor Shaft
8. Oscillation Switch
9. Motor Housing
10. Speed Dial
11. 2 x Neck Screw
12. Rubber Ring
13. Pole Connector
14. Height Adjustment Screw
15. Fixing Connector Screw
16. Base Decoration Cap
17. Inner Pole
18. Outer Pole
19. 4 x Base Screw
20. Base
21. Base Locking Screw


ASSEMBLING YOUR FAN

Assembling the Fan Body

Wall Fan


If unsure, ask someone with experience to help you mount the fan.


1. Select an appropriate location (consider Power Cord length) and fix the Base onto a strong wall or with the 3 provided Expansion Bolt, you will first need to drill holes in the wall that match the holes in the Base. If the power cord is hanging loose between the fan and the power outlet, make sure it cannot touch or obstruct fan blade rotation or fan oscillation at any time.
2. Tighten the Base and Pole by screwing the base locking screws.
3. Fit the Motor Housing to the Pole, and then tighten with 2 provided Neck Screws.

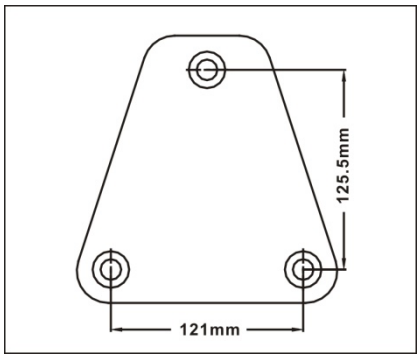


Pedestal Fan

1. Fix the Outer Pole to the Base with 4x Base Screws.
2. Tighten the Base Locking Screws at the bottom of Base.
3. Loosen the Height Adjustment Screw and Fixing Connector Screw, take out the Pole Connector and Inner Pole with Rubber Ring. Slide the Base Decoration Cap down over the assembly.

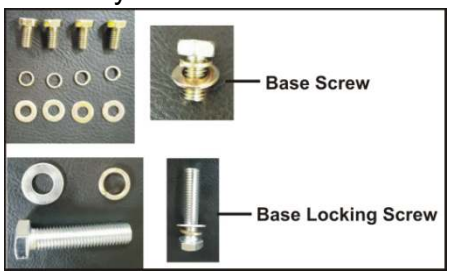


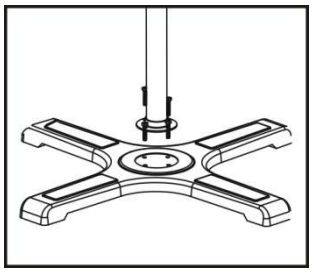

4. Replace the Pole Connector and Inner Pole with Rubber Ring, and tighten the Fixing Connector Screw. Pull the Inner Pole out from the Outer Pole to adjust the stand to desired height, and then tighten the Height Adjustment Screw.

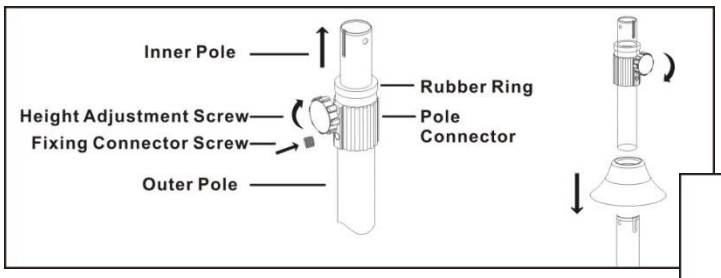

5. Slide the Motor Housing onto the Inner Pole (if necessary, loosen the Neck Screw first), Reinsert and tighten the Neck Screw, the above screw need to match the hole on the Inner Pole.

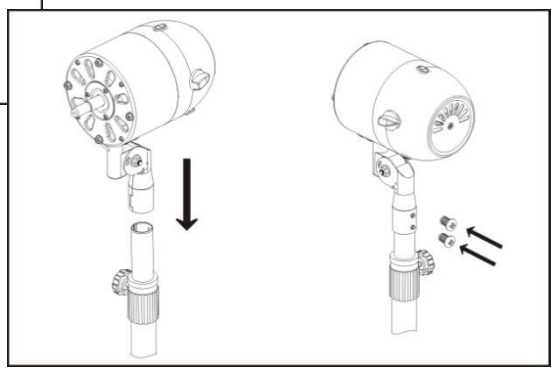

Assembling the Blade and Grille

Wall Fan

1. Unscrew the 4 x Rear Grill Locking Screws from the Motor Housing.
2. Align the Rear Grill on the Motor Housing and fix it in place using the 4 x Rear Grill Locking Screws (Figure 1).
3. Loosen the Blade Screw, slide the Fan Blade onto the Motor Shaft as far as it will go. Replace the Blade Screw into the slot on the Motor Shaft and tighten clockwise. Ensure that the flat surface of the Motor Shaft is aligned with the Blade Screw (Figure 2).

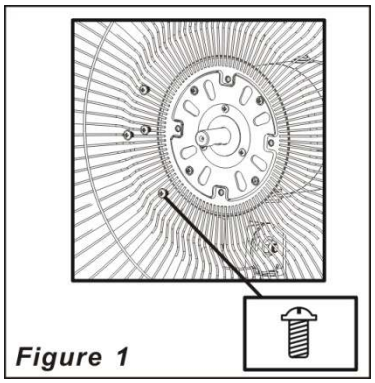


Figure 1

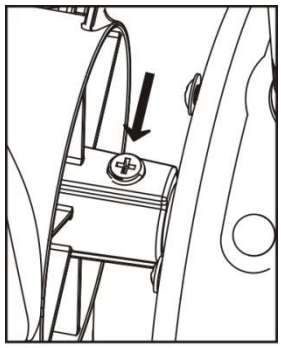


Figure 2

4. Centre the Front Grill by aligning the central logo so that it is horizontal and parallel to the floor. Snap the Grill Clips to secure; then tighten the Grill Locking Screw (and nut) on the bottom of the Rear Grill. (Figure 3)

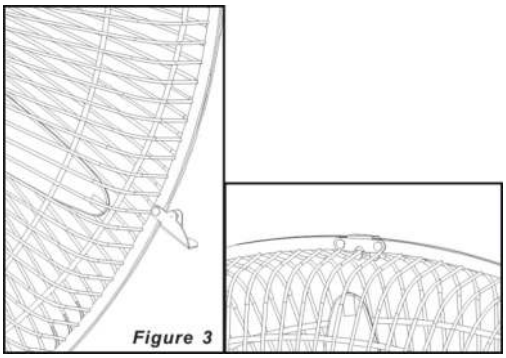


Figure 3

OPERATION

Turn on/ Speed Adjustment: Turn the Speed Dial to the desired position. There are 4 positions:

0 - Off
1 - Low Speed
2 - Medium speed
3 - High speed

Oscillation on/ off: Set the Oscillation Switch to the "I" position, the fan start oscillating; set the Oscillation Switch to "0" position, the fan stop oscillating.

TILT ADJUSTMENT: To adjust the vertical angle of the fan, turn it off then grip top and bottom of the grill firmly and tilt.

Caution: The fan should always be switched off when making this adjustment.

Pedestal Fan:

Height adjustment: To adjust the height, hold the Inner Pole with one hand and loosen the Height Adjustment Screw. Push the Inner Pole into or out of the Outer Pole as desired to adjust the height. Tighten the Height Adjustment Screw to fix the fan in its final position.

CARE AND MAINTENANACE



CAUTION

- Always switch off the fan before removing the grills or performing any cleaning.
- Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the components.

1. Loosen the Grill Screw and open the Grill Clips to detach the Front Grill.
2. Use a soft duster or a rag to dust off all the surfaces.
3. Wipe all the parts with a soft damp (not wet) cloth dipped in mild soapy water.
   Caution: Ensure that water doesn't get into the Motor Unit.
4. Use a dry cloth to thoroughly dry the blades and the grills before reassembling.

Make sure that the fan is completely assembled before switching on again.

TECHNICAL SPECIFICATIONS

Rated Voltage: 220-240V~ 50Hz
Rated Power: 280W (WAL75), 280W (PED75)

STORAGE AND DISPOSAL

If you do not plan to use the fan for extended periods of time, it is recommended that it is cleaned and stored (preferably in its original packaging) in a cool, dry place.



Do not dispose of electrical products with household waste. Please check with your local council for advice on disposal or recycling. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

WARRANTY

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAULT AND COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

This product is covered by a two year replacement warranty.

Before having the fan installed, check all the components to ensure there is no Visual damage. Should there be any damage, return the fan to place of purchase for Replacement.

The following points need to be checked before requesting a warranty replacement. Please ensure your installer also reads this information.

1. The fan or relevant part has not been modified, subject to misuse, neglect or been
2. Involved in an accident.
3. The repairs are not required as a result of normal wear and tear.
4. The product was installed in accordance with the instruction manual.
5. No solid state speed control device has been used with this appliance.

- If you consider there are faults relating to the installation, contact your installer to Rectify.
- If you consider there is an manufacturer defect to the fan motor, contact the warranty Service line on 1300 665 926, or log the warranty at www.ventair.com.au/warranty

You will need to provide the following information:

- The name and contact details of the licensed electrician installer (if applicable)
- The brand, model number and colour of the unit.
- The date and place of purchase of the unit.
- The owners name, address and telephone contact numbers
- The nature of the fault

ventair tm
THE AIR MOVEMENT SPECIALISTS

4 CAPITAL PLACE
CARRUM DOWNS VIC 3201
PHONE: (03) 9775 0556
FAX: (03) 9775 0775