


MODEL:SPYRFR5056 SPYRFR62


STEP DIMMING INSTRUCTIONS

Using Remote Control (Not Included)

1. Use Eco/Med/High buttons to alter the fan speed.
2. "OFF" button will turn the fan off only.
3. Turn Light "ON/OFF" for light.
4. Press the "STEP DIM" button to transition through 75%, 50%, 25% then back to 100% of light output.



WIRING DIAGRAM FOR ISOLATION SWITCH WITH REMOTE CONTROL

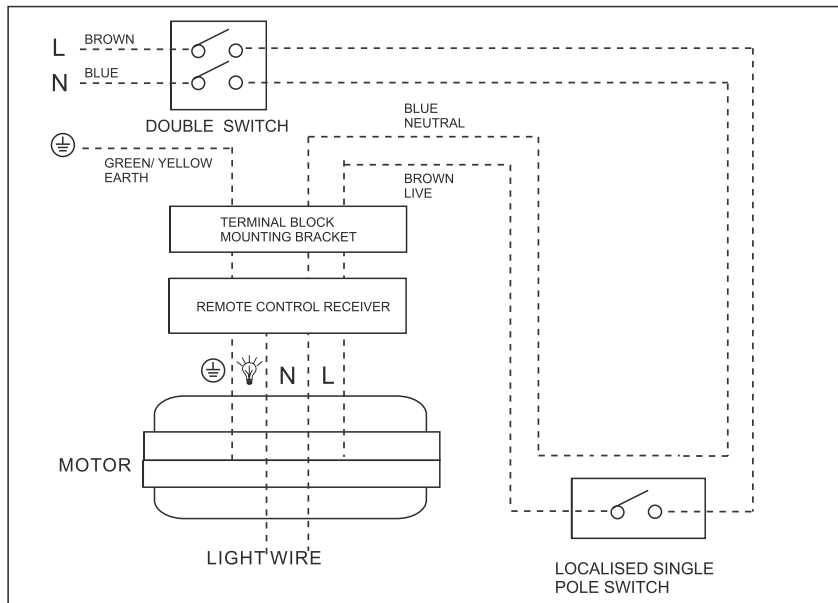

Step A: Connect the EARTH wire to the terminal port marked '⊕' on the terminal block mounting bracket.

Step B: Connect the supply LIVE wire to the wall controller terminal port labelled "TO 240V/50HZ".

Step C: Connect a wire from the Fan Live "L" from the terminal block mounting bracket, to the terminal port labelled "FOR FAN-L" on the wall controller.


Step D: Connect a wire from the Light Live "💡" from the terminal mounting bracket, to the terminal port labelled "FOR LIGHT-L" on the wall controller.

NOTE: The fan light wiring is only applicable to fan models with a light.

Step E: Connect the supply Neutral wire to the terminal port marked "N" on the terminal block mounting bracket.

Once all the above steps have been followed, you are now ready to restore the mains power supply. Make sure there is nobody near or under the fan, then turn ON the fan (and light switch if included in your model) to test.

INSTALLING OPTIONAL REMOTE CONTROL

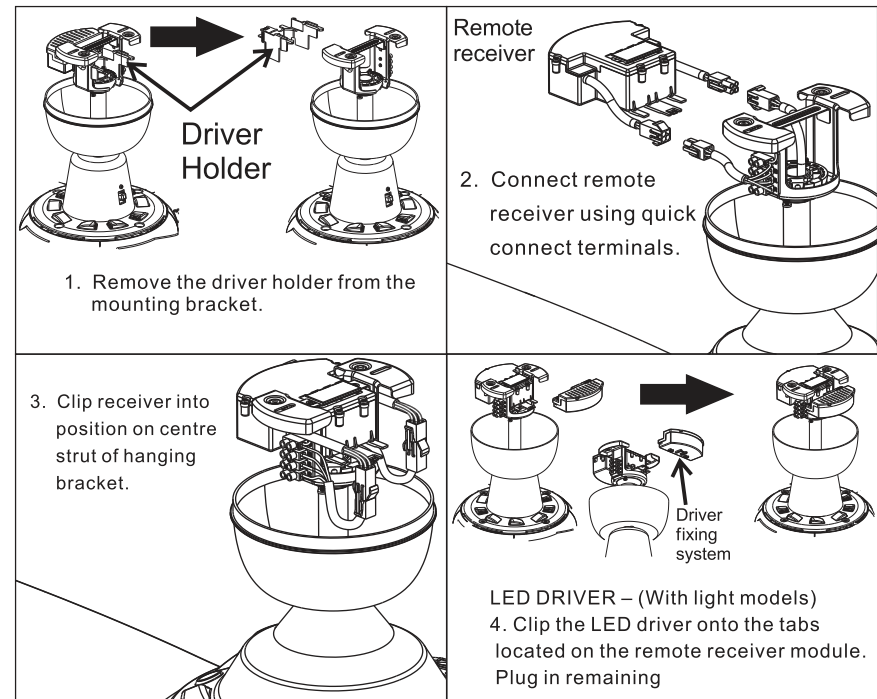

Follow the installation instructions below to complete the electrical wiring to the ceiling fan and wall controller.