



Manufacturer's statement

Read this operation manual carefully before use to ensure proper operation of this product.
Failure to read this operation manual may cause improper operation and may result in serious injury or death of a person.
The meanings of the symbols are as follows.

WARNING	Disregard of the warning symbol can cause improper operation which may cause death or serious injury.
CAUTION	Disregard of the caution symbol can cause improper operation which may cause injury of a person or damage the object.
NOTE	Special attention is required to the section of this symbol.

NOTE

- This sensor is a non-contact switch intended for header mount/ceiling mount of an automatic door. Do not use for any other applications.
- When setting the sensor's detection area, make sure there is no traffic around the installation site.
- Before turning the power on, check the wiring to prevent damage or malfunction of equipments that are connected to the sensor.
- Only use the sensor as specified in the operation manual provided.
- Be sure to install the sensor in accordance with the local laws and standards of the country in which the sensor is installed.
- Before leaving the job site make sure that the sensor is operating properly and instruct the building owner/operator on proper operation of the door and the sensor.
- The sensor setting can only be changed by an installer or service engineer. When changed, register the changed setting and dates in the maintenance logbook accompanying the door.

WARNING

Danger of electric shock

Do not wash, disassemble, rebuild or repair the sensor, otherwise it may cause electric shock or breakdown of the equipment.

NOTE

The following conditions are not suitable for the sensor installation.

- Vibrating header or mounting surface.
- Waterdrops or snow on the sensor.
- Moving objects, steel plate, emergency lights or illumination in the detection area or in vicinity.


Specifications

Model	: OM-105C / 106C	Output	: Form C relay
Cover color	: Silver / Black		: 50 V 0.3 A Max.(Resistance load)
Mounting height	: 2.0 (6'7") to 3.5 m (11'5")	Output hold time	: 0.5 s/2.0 s
Detection method	: Microwave doppler effect	Response time	: < 0.3 s
Transmitter frequency	: 24.125 GHz	Operating humidity	: < 80 %
Transmitter radiated power	: < 20 dBm	Operating temperature	: -20°C to +55°C (-4°F to 131°F)
Detection area	: See Detection area	IP rate	: IP54
Vertical adjustment	: +10° to +70° (Header mount) +20° to +80° (Ceiling mount)	Weight	: 140 g (4.9 oz)
Horizontal adjustment	: 30° to left or right	Accessories	: 1 Cable 3 m (9'10")
Power supply	: 12 to 24 VAC(±10 %) 12 to 30 VDC(±10 %)		: 1 Operation manual
Power consumption	: < 1.5 W(< 2 VA at AC)		: 2 Mounting screws
Minimum speed	: 5 cm(1 15/16")/s		: 1 Mounting template
Operation indicator	: Green / Stand-by Red / Detection Green blinking / Set-up		: 1 Narrow lens*

NOTE



The specifications herein are subject to change without prior notice due to improvements.

Outer dimensions and part names

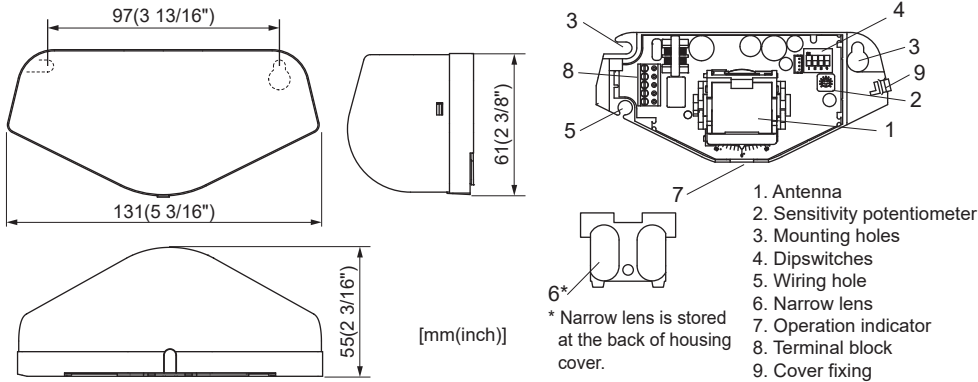

Installation

- Place the mounting template at the desired mounting position.
- Drill 2 mounting holes of $\phi 3.4$ mm ($\phi 1/8$ ").
- To pass the cable through to the header, drill a wiring hole of $\phi 8$ mm ($\phi 5/16$ ").
- Remove the mounting template.
- Remove the housing cover with screw driver as shown below.
Attach the sensor to the mounting surface with 2 mounting screws.

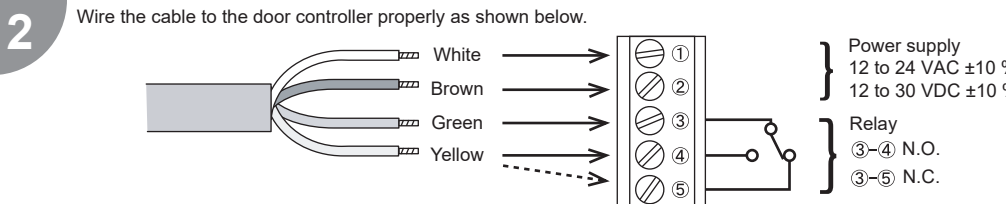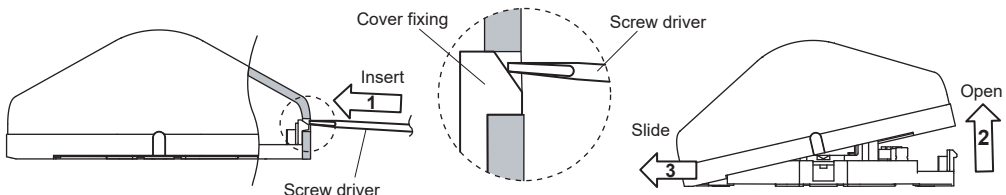

WARNING

Danger of electric shock

Before starting the procedure, ensure that the power is turned OFF.
When passing through the cable to the hole, make sure not to tear the shield, otherwise it may cause electric shock or breakdown of the sensor.

- Plug the connector of the sensor.
- Supply power to the sensor and the sensor will automatically start the set-up mode with blinking Green.
- Adjust the detection area and set the Dipswitches. (See **Adjustments**)

NOTE

Make sure to connect the cable correctly to the door controller before turning the power ON.
The sensor does not detect objects for 10 s after supplying power.

- Hook the housing cover on the left side of main body to place the housing cover.
If wiring is to be exposed, break the knockout.

WARNING

Danger of electric shock


Do not use the sensor without the housing cover. When using the cable knockout, install the sensor indoors or use the rain-cover (Separately available) otherwise electric shock or breakdown of the sensor may occur.

Adjustments

1

Detection area

Adjust the detection area with Sensitivity potentiometer.

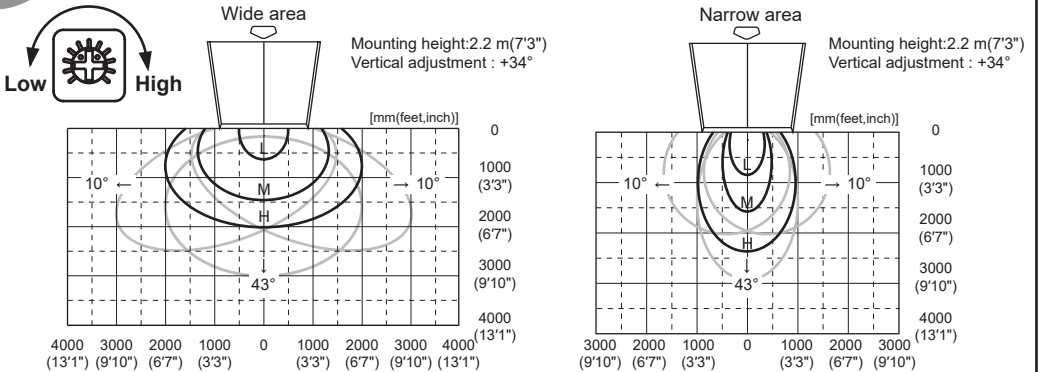

NOTE

When the sensor is mounted at higher than 3.0 m, set the Sensitivity to "H"(High).

2

Detection area angle adjustment

	Adjustment	Scale	Angle
Vertical adjustment	Front view	Side view	Header
			Ceiling
Horizontal adjustment	Front view	Front view	Side view
			Front view


CAUTION

Do not touch electric part of the sensor to avoid possible breakdown of the sensor.

3

Narrow area

To obtain Narrow area, place Narrow lens attached at the back of housing cover.
To place Narrow lens, follow step1&2 as shown on the right.

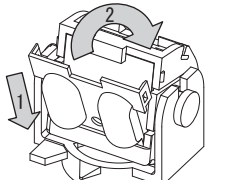

4

Dipswitches settings

Set Dipswitch1&2 to enable the direction recognition. (OM-106C only.)

Bi-direction(Bi) Dipswitch 1: OFF, Dipswitch 2: ON Dipswitch 3: Output hold time 0.5 s, 2.0 s	Uni-direction(Uni) Dipswitch 1: ON, Dipswitch 2: OFF Dipswitch 4: Immunity If there is external interference, set Dipswitch 4 to ON.	: Detection : Non-Detection
Bi-direction When Dipswitch1 is set to OFF, Bi-direction mode is effective, regardless of Dipswitch2 setting. Dipswitch 1: OFF, Dipswitch 2: ON	Uni-direction with Auto-caution mode*(ACM) Dipswitch 1: ON, Dipswitch 2: ON	*Auto-caution mode (A person wavering in the detection area to be detected.)

Inform building owner/operator of the following items

WARNING

- Always keep the housing cover clean. If dirty, wipe the housing cover lightly with a cloth. (Do not use any cleaner or solvent.)
- Do not wash the sensor with water.
- Do not disassemble, rebuild or repair the sensor yourself, otherwise electric shock may occur.
- Always contact your installer or service engineer when changing the settings.
- Do not paint the housing cover.

NOTE

- When turning the power ON, always walk-test the detection area to ensure proper operation.
- Do not place any objects that move or emit light in the detection area. (e.g. Plant, illumination, etc.)

Checking

Check the operation according to the chart below.

Sensor status	Power OFF	Set-up (Approx. 10 s)	Stand-by	Detection
Operation indicator	OFF	Green blinking	Green	Red
Output contact				

Troubleshooting

Problem	Operation indicator	Possible cause	Possible countermeasures
Door does not open when a person enters the detection area.	None	Wrong power supply voltage.	Set to the stated voltage.
	Unstable	Wrong wiring or connection failure.	Check the wiring and Terminal block.
	Green	Sensitivity is too low.	Set the sensitivity higher.
	Green blinking	Wrong detection area positioning.	Check Adjustments .
Door opens when no one is in the detection area. (Ghosting)	Red	The sensor is being set up.	Wait for the set-up to complete.
		Water drops on the housing cover.	Wipe the housing cover with a cloth.
		The detection area is overlapping with the door.	Adjust the detection area away from the door. Or set Dipswitch4 to ON.
		Sensitivity is too high.	Set the sensitivity lower.
Door remains open	Green	Raining or snowing.	Set Dipswitch1 to ON.(OM-106C only) Or Dipswitch4 to ON.
		Wrong wiring or connection failure.	Check the wiring and Terminal block.

Hereby, OPTEX declares that the radio equipment type OM-105C/106C series are in compliance with RED 2014/53/EU.
The full text of the EU DoC is available at the following internet address; www.optex.net

Manufacturer

OPTEX CO., LTD.

5-8-12 Ogoto Otsu 520-0101, Japan
TEL.: +81(0)77 579 8700 FAX.: +81(0)77 579 7030
URL www.optex.net

North and South America Subsidiary

OPTEX INCORPORATED

18730 S. Wilmington Avenue, Suite 100
Rancho Dominguez CA 90220 U.S.A
TEL.: +1-800-877-6656 FAX.: +1(310)898-1098
URL www.ot-inc.com

European Subsidiary

OPTEX Technologies B.V.

Henricuskade 17, 2497 NB The Hague, The Netherlands
TEL.: +31(0)70 419 41 00 FAX.: +31(0)70 317 73 21
E-MAIL: info@optex.eu URL www.optex.eu

East coast office

8510 McAlpines Park Drive, Suite 108 Charlotte, NC 28211 U.S.A.
TEL.: +1-800-877-6656 FAX.: +1(704)365-0818
URL www.ot-inc.com