

Supreme JET DRY EXECUTIVE II MAINTENANCE GUIDELINES



PLEASE READ THE FOLLOWING GUIDELINES TO ENSURE THE SMOOTH RUNNING AND LONGEVITY OF YOUR SUPREME JET DRYER EXECUTIVE II HAND DRYER.

- ✓ Daily Cleaning Guidelines
- ✓ Weekly Cleaning Recommendations
- ✓ HEPA and Lint Pre-Filter Replacements (6 monthly)
- ✓ Control Panel Display

DAILY CLEANING GUIDELINES

1. Switch the machine off at the wall or use the switch above the water collection tray.
NOTE: If you are using the machine's ON/OFF switch it is the larger one of the two.



2. Empty the water collection tray. To unlock the water tray slide the lock tab across. Remove the water tray and rinse with warm water.



3. Wipe down the machine using a warm damp cloth and a surface cleaner.
NOTE: **Cleaning should be performed daily using a soft cloth and non-abrasive and non-caustic cleaning fluid to prevent malfunctions or damage to the unit.**
Do not spray water directly into the machine.
It is recommended to wear protective gloves during cleaning.



Turn the power switch back on, then replace the water tray and lock.



WEEKLY CLEANING RECOMMENDATIONS

Weekly cleaning requirements in addition to daily cleaning

1. Pour a cup of warm water down the drain hole in the drying chamber.



2. Gently scrub the drain hole inside the drying chamber with a cleaning brush. Then check the water tray is empty and wipe down machine as per daily cleaning guidelines.



3. Remove the water tray and empty it. Then remove the lid of the water tray and rinse with warm water. Pay particular attention to removing soap scum from the two terminals.



4. Remove lint pre-filter holder located below water tray. Gently snap open the holder and crush away any lint on the filter. Then put the filter back together before placing both the lint pre-filter and water tray back into the machine. Turn power back on.

Please note: It is recommended to replace your lint pre-filter every six months when you change your HEPA filter.



HEPA AND LINT PRE-FILTER REPLACEMENTS (6 monthly)

FAILURE TO REPLACE FILTERS ON TIME MAY INTERRUPT AIR FLOW AND OVERHEAT THE MOTOR, IN THIS CASE THE WARRANTY WILL BE INVALIDATED.


1. Slide the lock tab across and remove the water tray.



2. Remove the lint pre-filter by pulling it out towards you.



3. Replace the lint pre-filter by gently snapping open the holder. Take out the old lint pre-filter and replace it with the new one. Then gently snap the lint pre-filter holder back together.

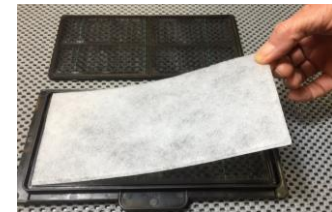

4. Remove the HEPA filter by pulling the black holder downwards.



5. Take the old HEPA filter and freshener pod out of the holder and replace with the new ones.

NOTE: Do not discard the holder.



6. Put the filter holder back into the machine. The filter LED will stay on for 5 seconds and then blink 3 times. The machine counter is now reset.


NOTE: The holder is marked "front". This should face you when fitting the holder.

Put the lint pre-filter and water tray back into the machine and lock the tab again.




CONTROL PANEL DISPLAY


1. When you turn your Supreme Jet Dry Executive II on you will notice a LED display on the top panel. This symbolises that it is ready for operation.

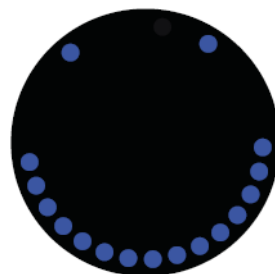


-
2. The blue dots will spin when the machine is in operation.

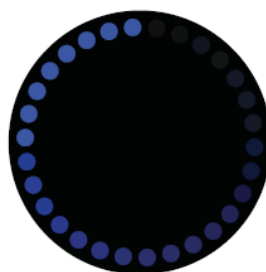

-
3. The 'Water Tank' icon symbolises that the water tank is full and needs emptying (follow weekly cleaning recommendations.)

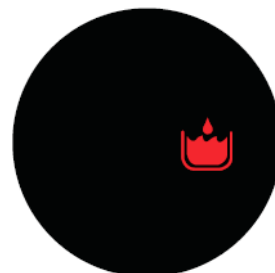

-
4. The HEPA filter icon will begin to flash when the HEPA filter and the lint pre-filter need changing. The machine is designed to stop working shortly after this light has begun flashing. Once the HEPA filter is replaced it will reset your machine.
It is recommended that you change the HEPA filter every six months.

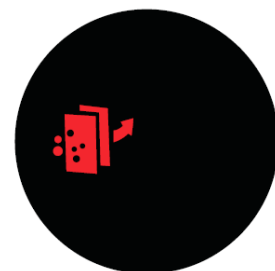

TO ORDER YOUR REPLACEMENT HEPA FILTER PLEASE PHONE SPL 07 823 5790

